

Vend Settings

Underneath View of Drawer Assembly

Single Coin Vend Setting, eg. 50p (Fig 1)

- 1 Slacken screws securing *Back Fence Bracket* (A). Insert 50p thickness spacer (*Dim. X*). Push bracket (A) forward against the spacer and tighten screw.
- 2 Remove thickness spacer, slacken screw (D) securing *Side Fence Bracket* (C). Slide bracket (C) up so as the notched face is 1mm from bracket (A), then tighten screw (D).
- 3 Replace drawer and check vend.

Multiple Coin Vend Setting, eg. 60p (50p+10p) (Fig 2)

- 1 Slacken screws securing *Back Fence Bracket* (A). Insert 50p+10p thickness spacers (*Dim. X*). With the 50p spacer against bracket (A), tighten screws.
- 2 With all thickness spacers still in position, slacken screw (D), securing *Side Fence Bracket* (C). Slide bracket (C) up so as the notched face is 1mm from 50p spacer, then tighten screw (D).
- 3 Position *Stacking Spring* (B), as shown, leaving a gap of approx 1mm from the *Back Fence Bracket* (A), then tighten screw.
- 4 Replace drawer and check vend.

Multiple Coin Vend Setting, eg. 70p (50p+10p+10p) (Fig 3)

- 1 If fitted, **remove** *Stacking Spring* (B).
- 2 Slacken screws securing *Back Fence Bracket* (A). Insert 50p+10p+10p thickness spacers (*Dim. X*). With the 50p spacer against bracket (A), tighten screws.
- 3 With all thickness spacers still in position, slacken screw (D), securing *Side Fence Bracket* (C). Slide bracket (C) up so as the notched face is 1mm from 50p spacer, then tighten screw (D).
- 3 Reposition *Stacking Spring* (B), as shown, leaving a gap of approx 1mm from the *Back Fence Bracket* (A), then tighten screw.
- 4 Replace drawer and check vend.

Note: Follow the same steps for other vend settings (maximum 3 coins).

