

# How to Remove Drawer

The drawer is simply removed by inserting the appropriate vend coins and pulling the drawer clear of the machine.

Should spurious coins become stuck or inaccurate settings jam the drawer mechanism, the drawer can be released by pushing the coin pawl in direction of arrow (B). (Fig 4)

To replace the drawer it is important that the snatch back lever is engaged properly. To do this, push the lever (A) back as far as possible and insert drawer. Ensure correct location of snatch back lever in slot in drawer as shown (C). Ensure snatch back lever is correctly set by pulling drawer. If lever is set correctly the drawer will pull back into the fully closed position. If lever is incorrectly set, the machine will not vend correctly. (Fig 5)

Fig 4

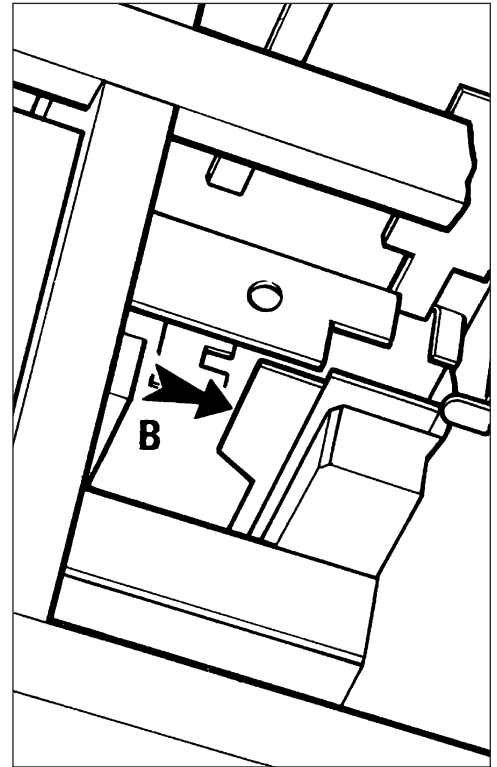


Fig 5

